


## INSTALLATION INSTRUCTIONS

1. Install the metal bracket onto the wall.
2. Attach and secure (by set screw using Allen key) the holder onto the wall bracket.

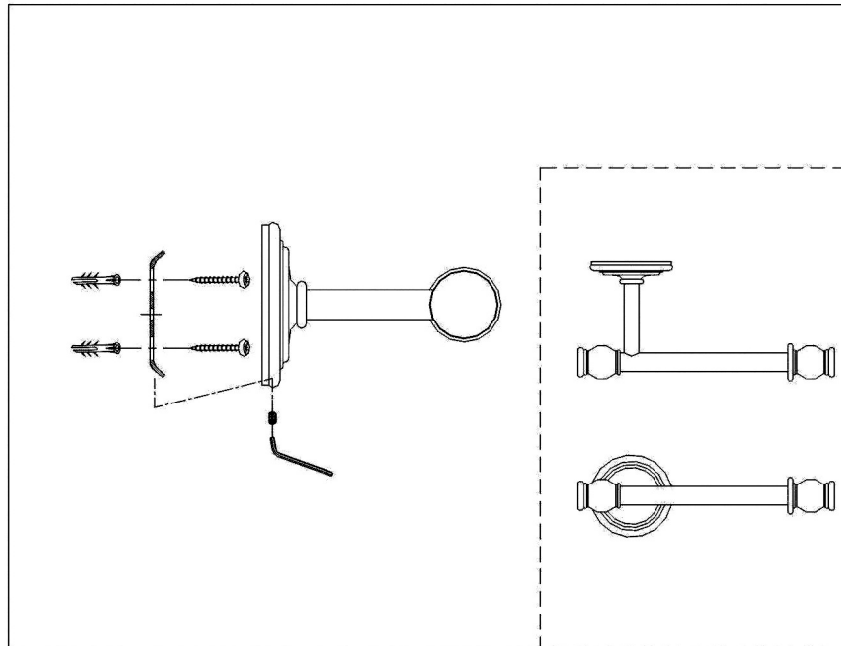

**Tissue Holder**

**TY FOBARE**  
*Bath Lighting & Accessories*

Ty Fobare, Inc. 615. 595. 7161 [www.tyfobare.com](http://www.tyfobare.com)